

# Installation Guide

 
**NEWSTAR**  
computer products

[www.newstar.eu](http://www.newstar.eu)

## LCD TV/MONITOR WALLMOUNT



Model:  
FPMA-W810,  
W820 & W830



This product is designed to mount flat panel televisions weighing up to 12 kilo (26lbs) to a vertical wall. It allows you to effortlessly tilt your new television up or down.

**Safety Warning:** Be careful to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury.

**Note** The included hardware is for mounting on walls with wood stud construction. If you are uncertain about the nature of your wall, consult an expert. Please consult your hardware or installation professional for proper mounting to other types or walls.

The supplied hardware is not for steel.



FPMA-W810

50-70 mm




FPMA-W820

45-235 mm




FPMA-W830

45-355 mm

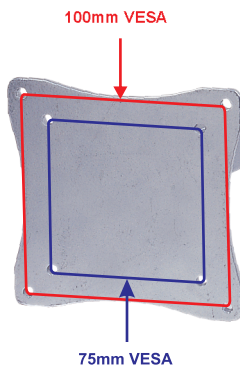


Model: FPMA-W830


- > Use screws to secure to wall stud
- > Gebruik de schroeven voor montage aan de muur

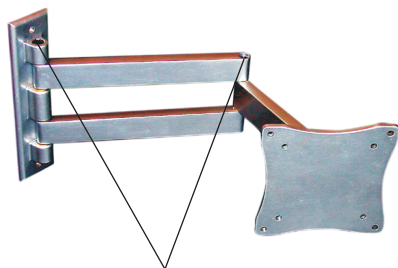

- > Use Allen Keys to tighten Joints
- > Draai gewrichten aan met de sleutel

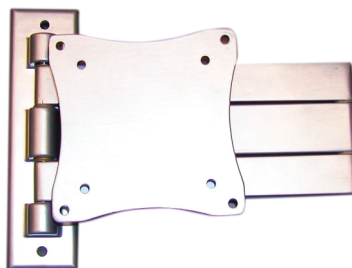

- > Folded to mount monitor flush to wall
- > LCD TV plat tegen de muur

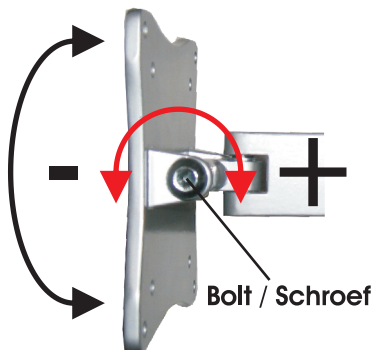

## IMPORTANT NOTICE BELANGRIJKE MEDEDELING

### How to tilt your TV?

**Hold your screen tight during this installation!**

1. Untighten the bolts (-)
2. Tilt the screen
3. Tighten the bolts (+)

### Hoe kan u de TV kantelen?

**Houd uw scherm goed vast tijdens deze installatie!**


1. Schroeven losdraaien (-)
2. Scherm kantelen
3. Schroeven goed aandraaien (+)

# Installation Guide



[www.newstar.eu](http://www.newstar.eu)

## LCD TV/MONITOR WALLMOUNT

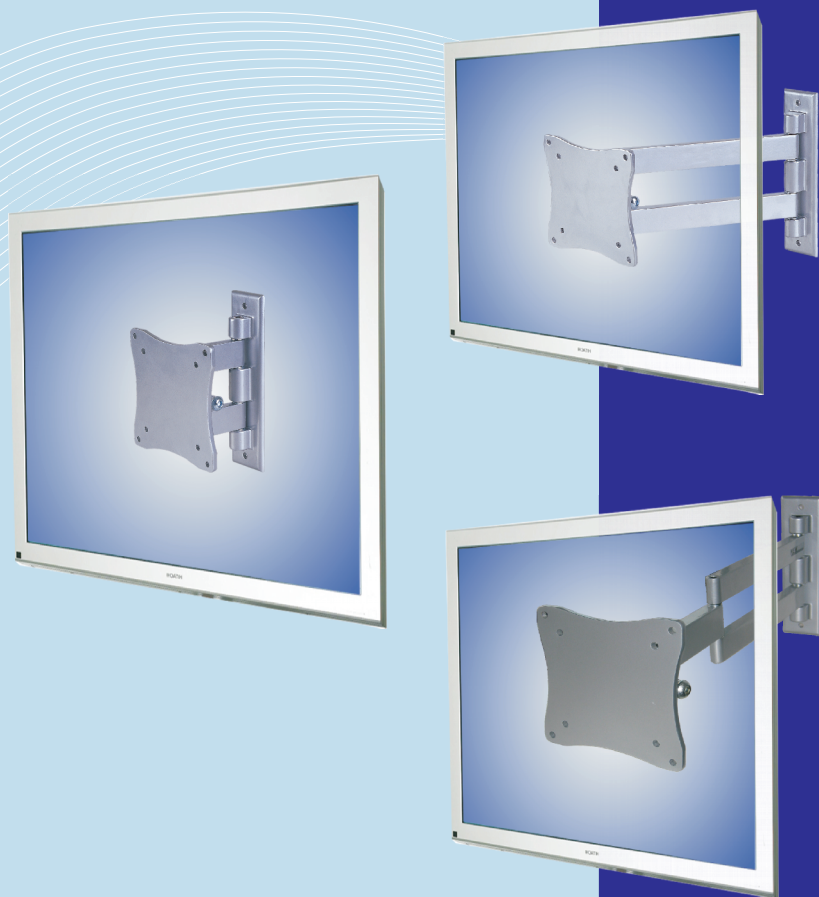

All Rights Reserved  
Unauthorized Copying and Reproduction are prohibited